


Balls-N-More Storage Center

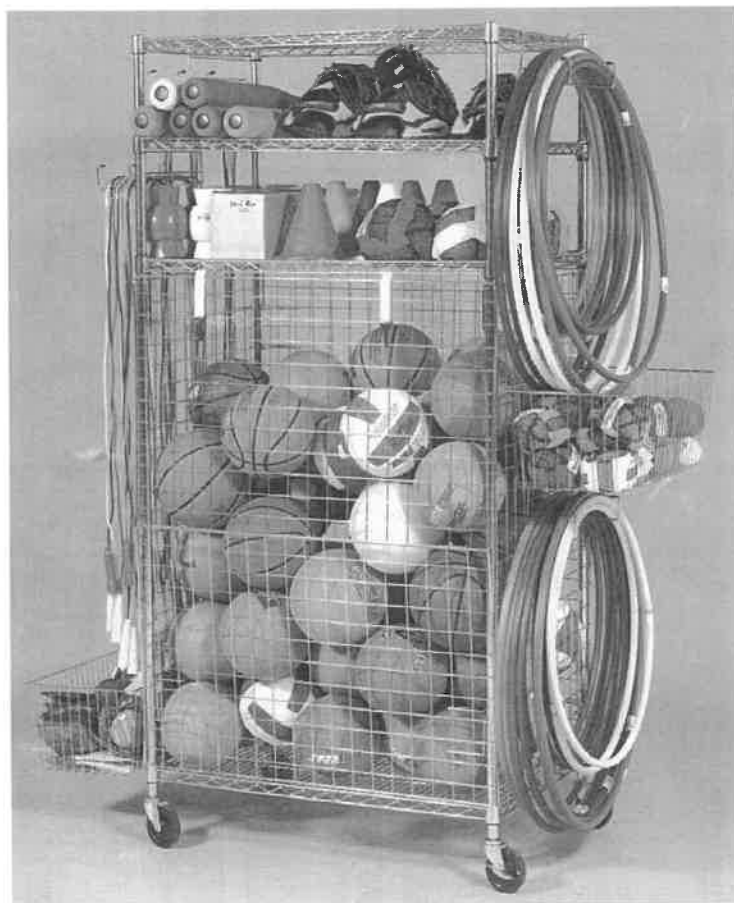

Component List:

- | | |
|--|------------------------|
| 4xShelves (A) | 1 x Basket (M) |
| 4xBottom poles with threading for castors (B) | 1 x Universal hook (N) |
| 4xTop poles (C) | 1 x Hoop hook (O) |
| 1xBack panel with hinged door 3' high (D) | |
| 1xFront panel with hinged door 4' high (E) | |
| 4xSide panels 2' wide x 3' high (F) | |
| 1xBack top panel 3' wide x 3' high (G) | |
| 1xBack bar (H) | |
| 38 x Plastic sleeve clips (I) | |
| 4xThreaded tube joints (J) | |
| 8xClosing clips (K) | |
| 4xCastors, two locking and two non locking (L) | |


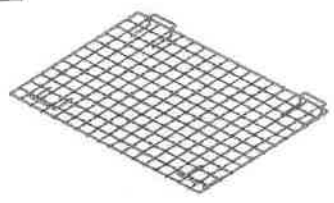
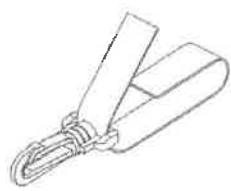
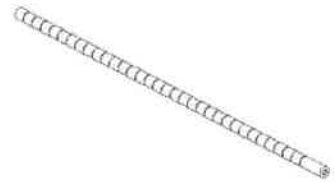
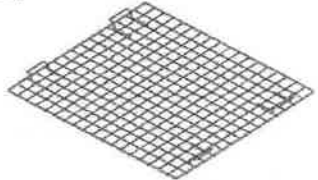




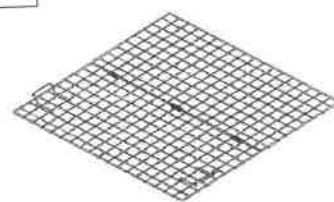

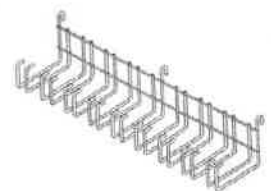
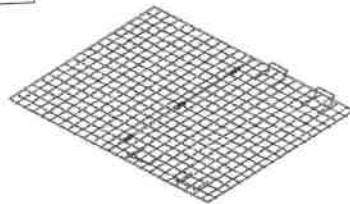

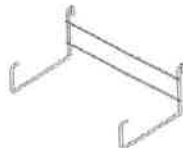
<p>A</p>  <p>4 PCS of shelves</p>	<p>F</p>  <p>4 PCS of side panels</p>	<p>K</p>  <p>8 PCS of clippers</p>
<p>B</p>  <p>4 PCS of bottom tubes</p>	<p>G</p>  <p>1 PC of top back panel</p>	<p>L</p>  <p>1 SET of 4" castor</p>
<p>C</p>  <p>4 PCS of top tubes</p>	<p>H</p>  <p>1 PC of back bar</p>	<p>M</p>  <p>1 PC of basket</p>
<p>D</p>  <p>1 PC of back bottom panel with door</p>	<p>I</p>  <p>38 PCS of plastic sleeves</p>	<p>N</p>  <p>1 PC of universal hook</p>
<p>E</p>  <p>1 PC of front panel with door</p>	<p>J</p>  <p>4 PCS of tube joiners</p>	<p>O</p>  <p>1 PC of hoop hook</p>

Figure 1: Component List

Assembly

Step 1:

As shown in the inset, fix four pairs of plastic sleeves (I) at the same level on all four bottom tubes (B).

Slide shelf (A) down the four tubes (B) as shown in Figure 2 making sure the threaded ends of B face down.

Screw castors (L) into the bottoms of tubes (B). The locking castors should be diagonally opposite each other. Lock the castors until the assembly is complete.

When complete it should look like Figure 3.

Figure 2: Step 1 Assembly

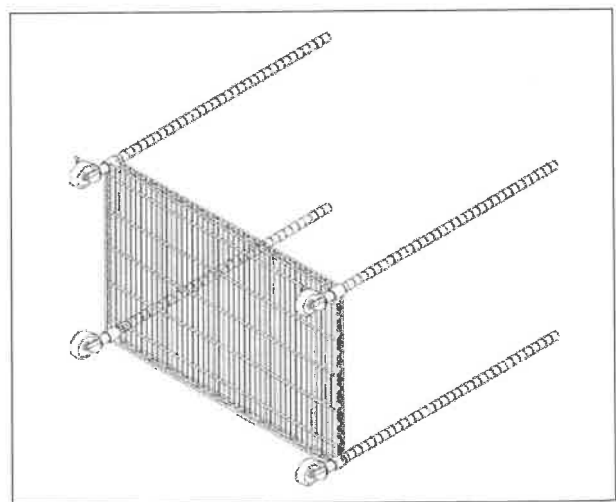
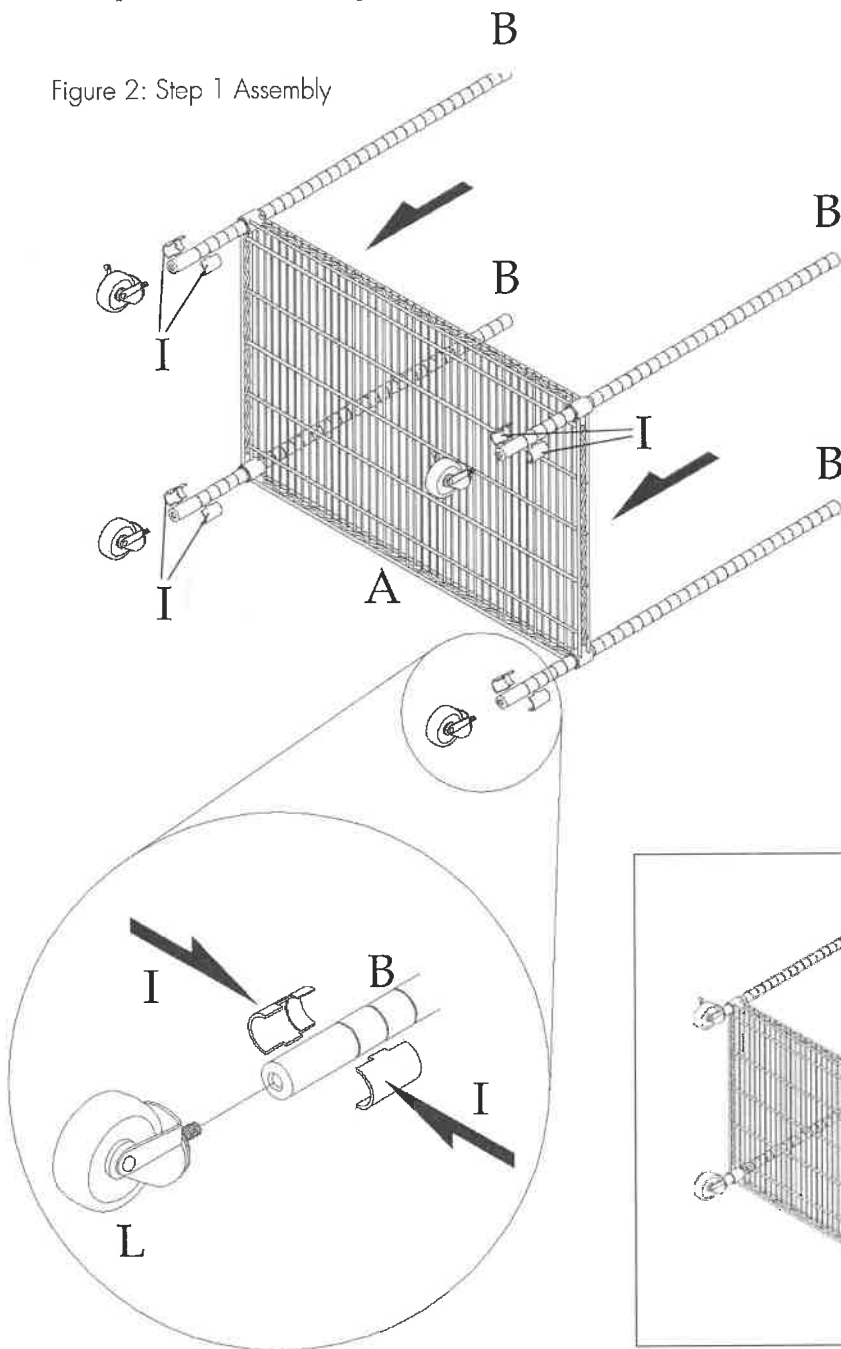


Figure 3: Step 1 Completed

Step 2:
Stand the frame upright. Using joiners (J), connect all four C tubes to the B tubes as shown in Figure 4 and inset.
When complete it should look like Figure 5.

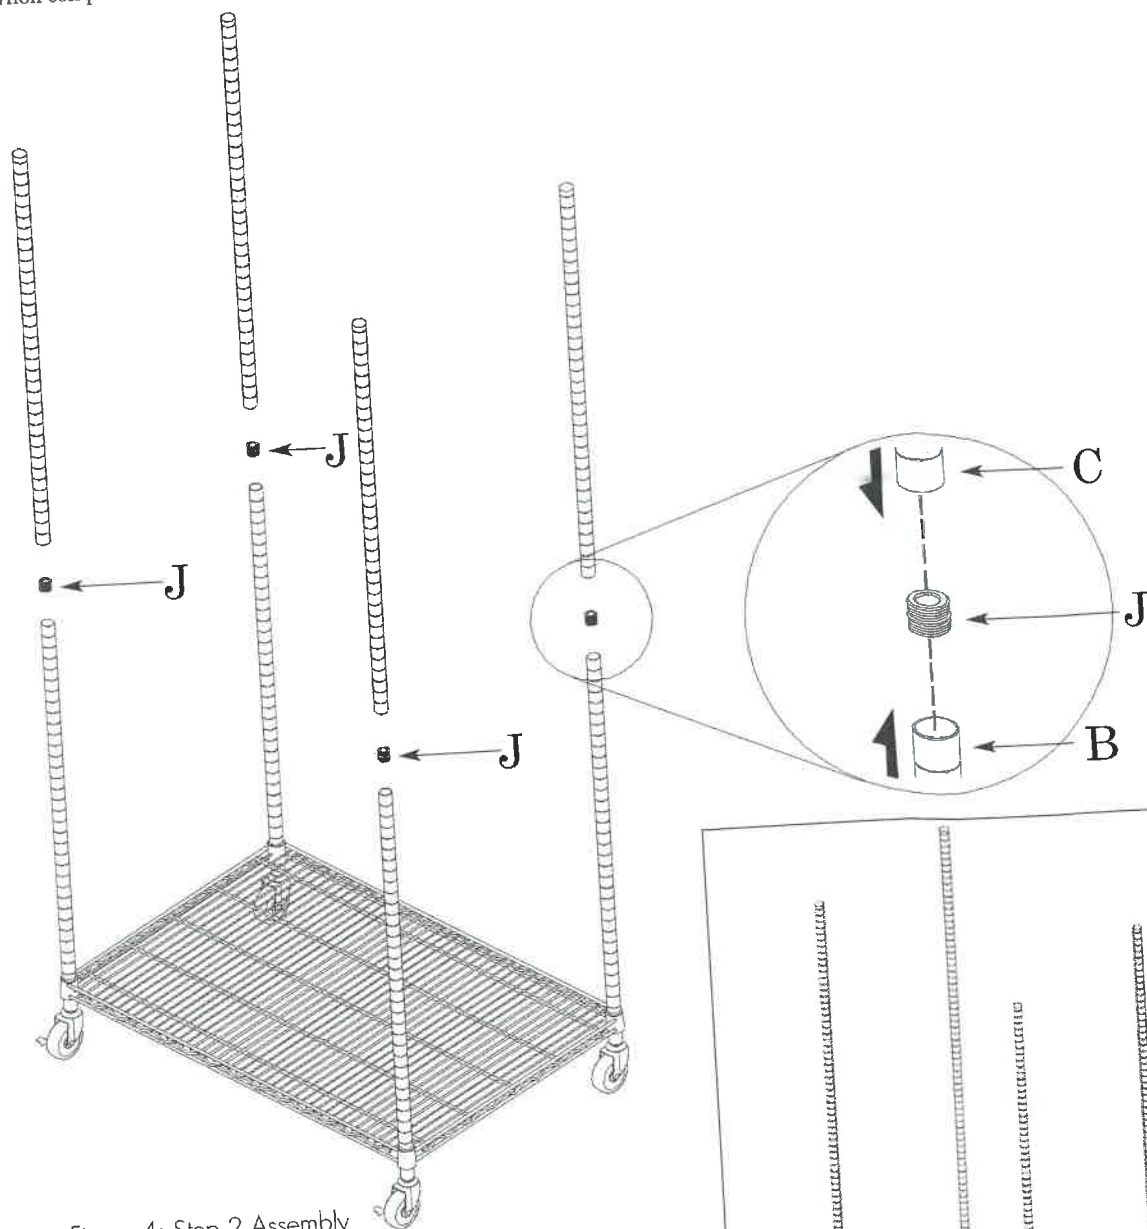


Figure 4: Step 2 Assembly

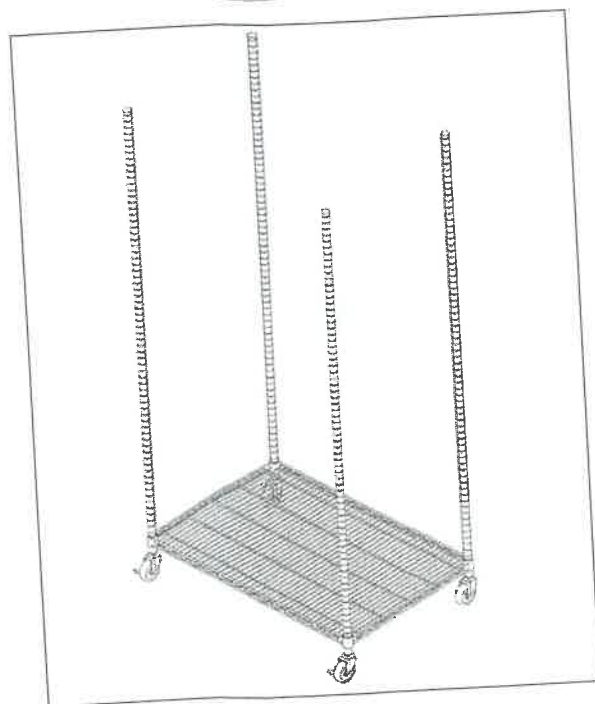


Figure 5: Step 2 Completed

Step 3:

As shown in insets 1 and 2, clip back panel (D) to tubes (B). Make sure that the end with the clip attachments on back panel (D) is closer to the castors.

When attached it should look like Figure 7.

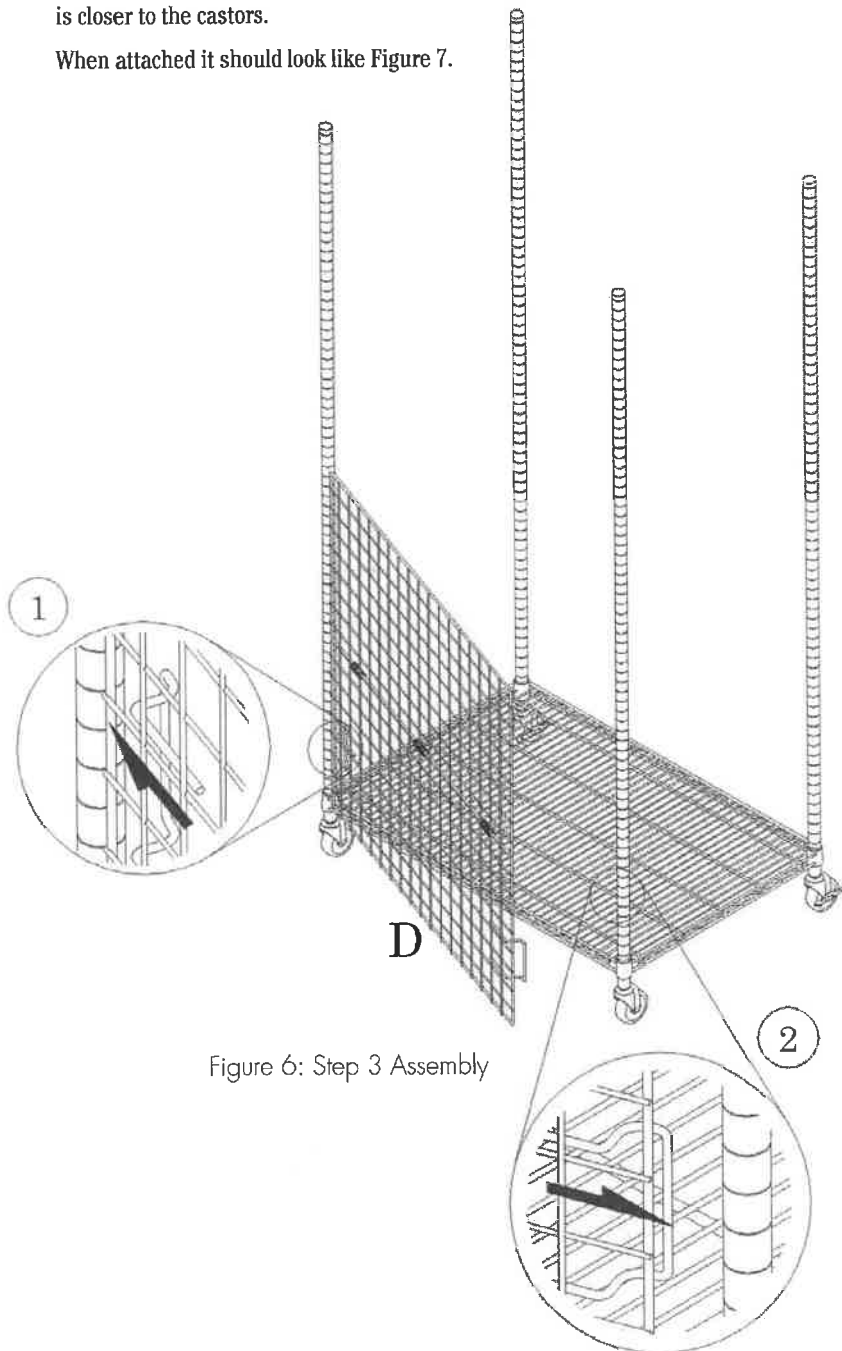


Figure 6: Step 3 Assembly

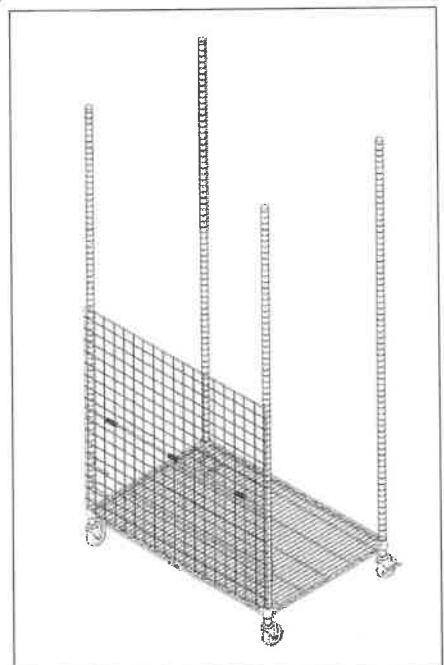


Figure 7: Step 3 Completed

Step 4:

Attach two pairs of sleeves (I) to bottom tubes (B) as close as possible to the top of the back panel (D). This sets the height of the back bar (H). Slide back bar (H) until it rests on the sleeves (I), as shown in Figure 8.

When complete it should look like Figure 9.

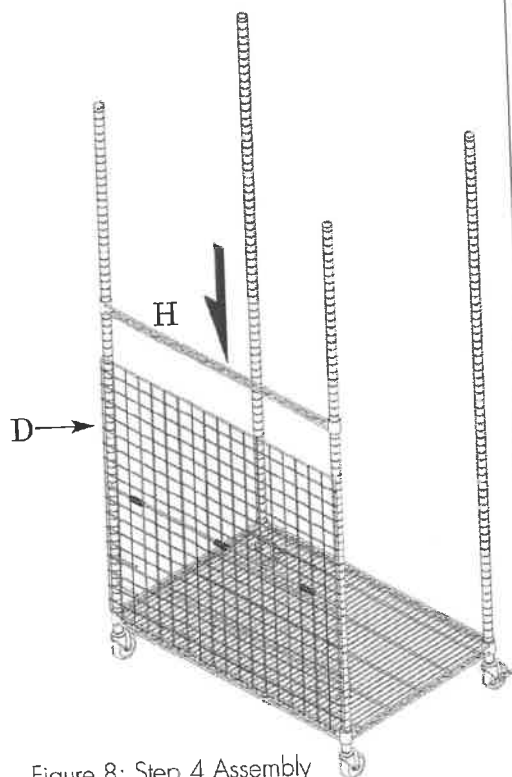


Figure 8: Step 4 Assembly



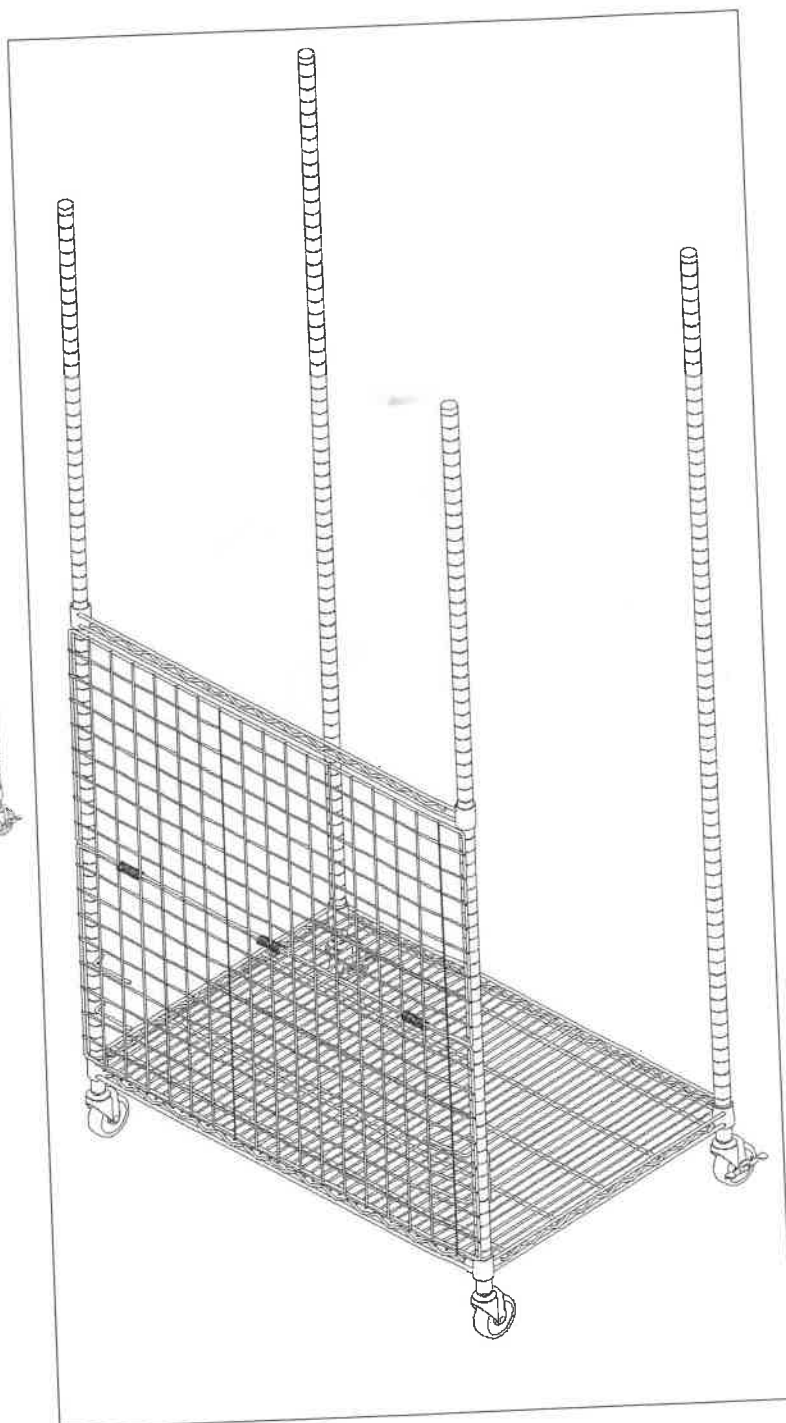


Figure 9: Step 4 Completed

Step 5:

Clip front panel with door (E) to the bottom tubes (B) as shown in insets 1 and 2. Make sure that the end with the clip attachments on the front panel (E) is closer to castors.

When attached it should look like Figure 11.

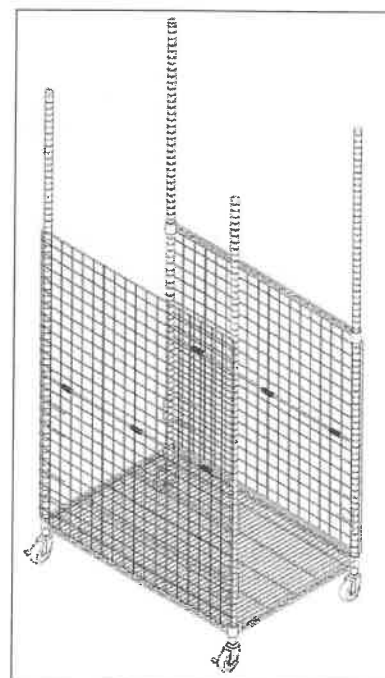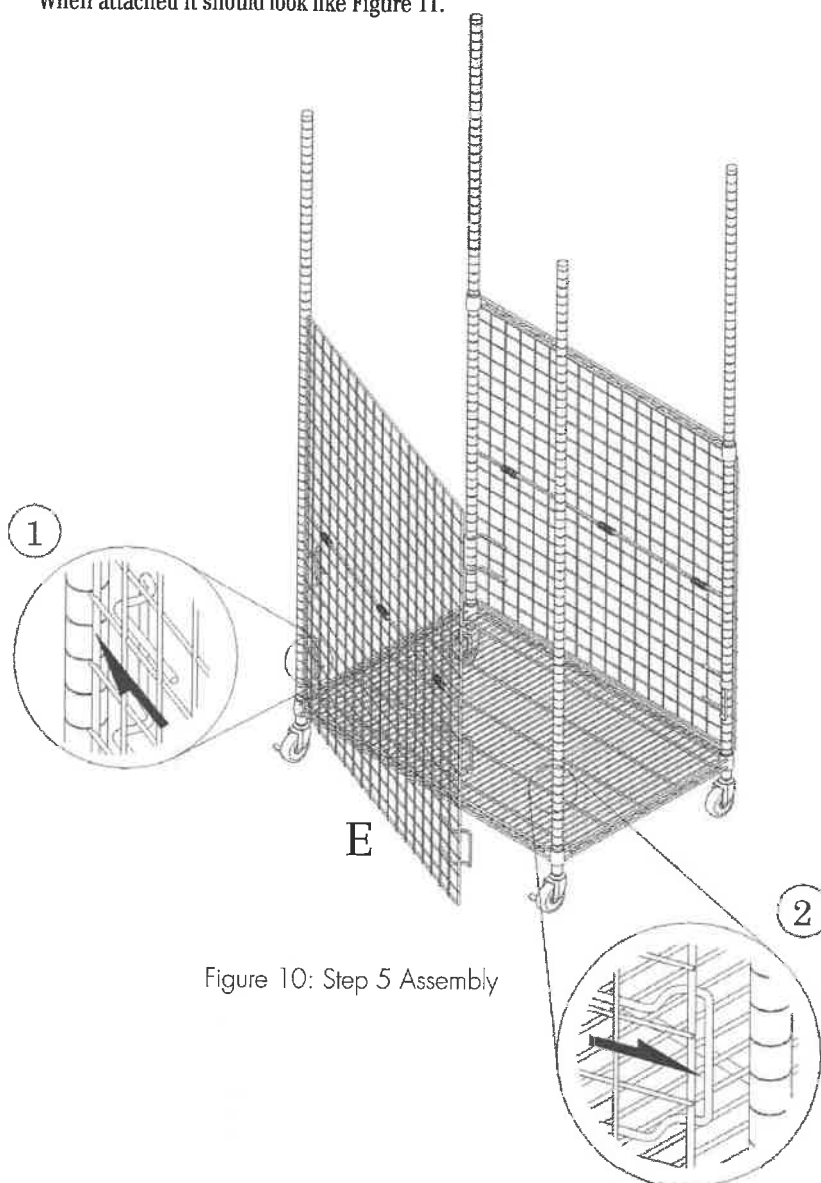

Step 6:

Clip a pair of sleeves (I) at the same height on all four upright tubes, just above the front panel with door (E). Slide shelf (A) until it rests firmly on the sleeves (I) as shown in Figure 12.

When done it should look like Figure 13.

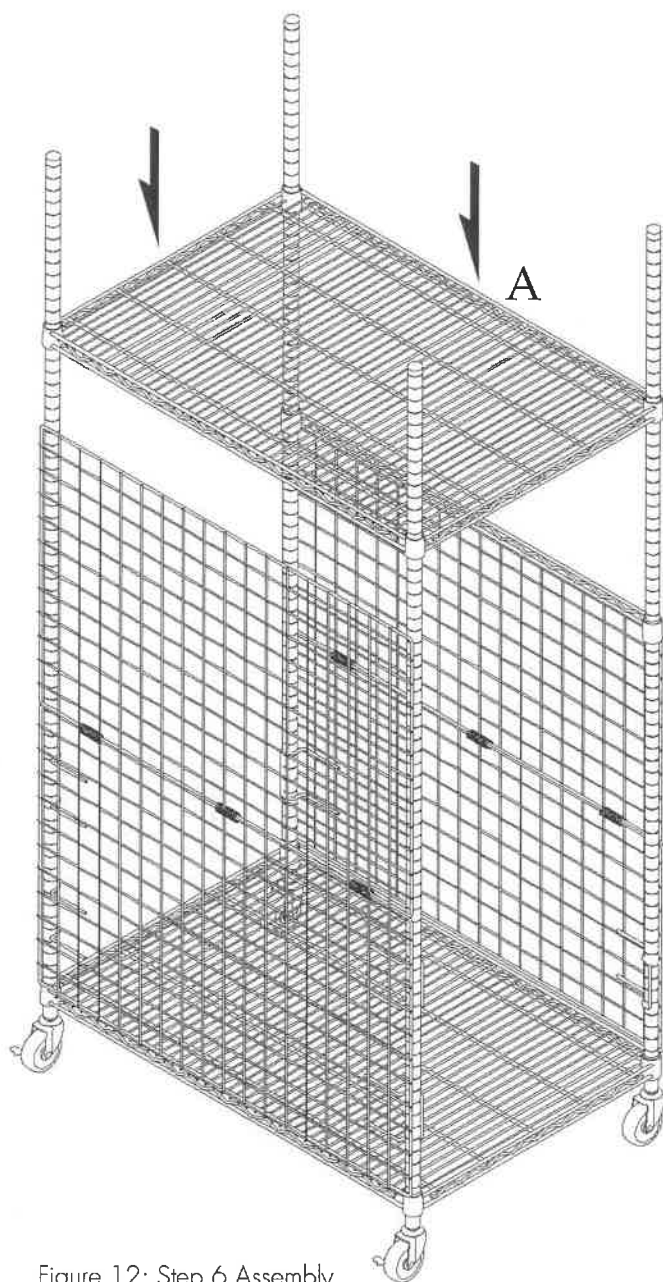


Figure 12: Step 6 Assembly

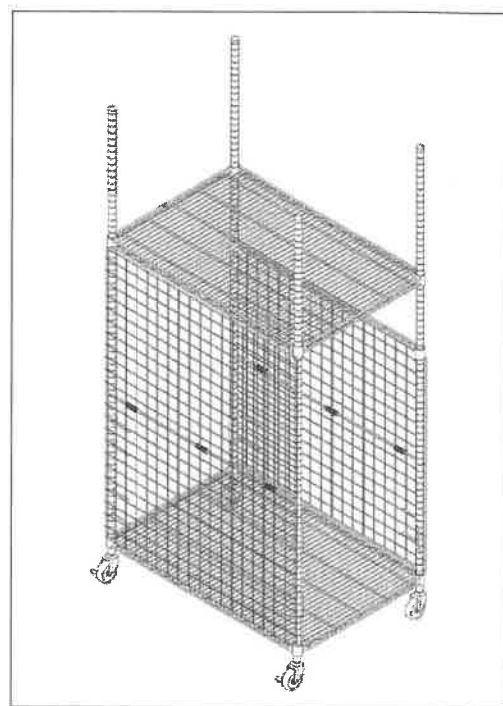


Figure 13: Step 6 Completed

Step 7:

Clip a pair of sleeves (I) at the same height on all four upright tubes halfway between the already installed shelf (A) and the top of tube (C). Slide a shelf (A) down until it rests securely on the sleeves (I).

Repeat for the last shelf (A) but this time clip the sleeves (I) to the very top of tubes (C). Slide the last shelf (A) so it rests securely on the sleeves (I).

Clip side panel (F) to the upright poles as shown in insets 1 and 2.

When completed, it should look like Figure 15.




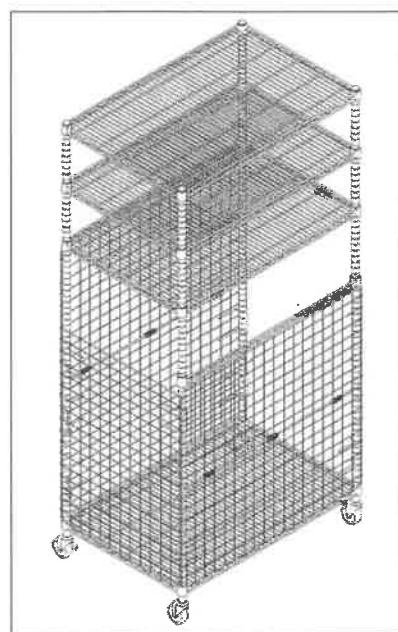


Figure 15: Step 7 Completed

Step 8:

Attach the remaining three side panels (F) to the frame and then attach top back panel (G) to the back of the frame as shown in Figure 16 and insets 1 and 2.

When complete, it will look like Figure 17.

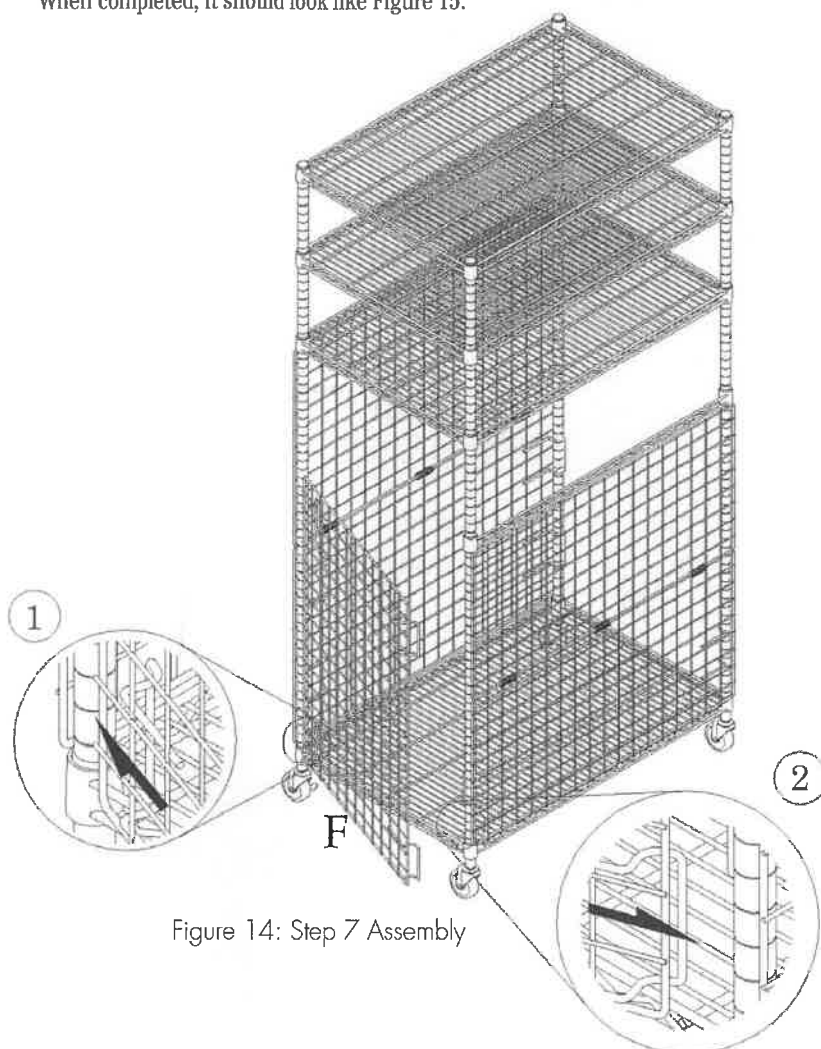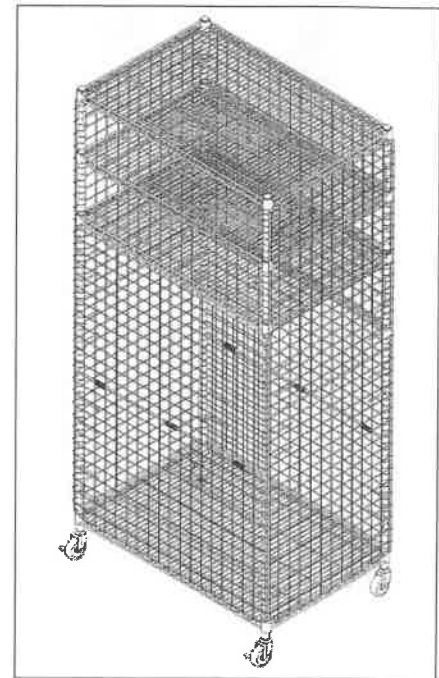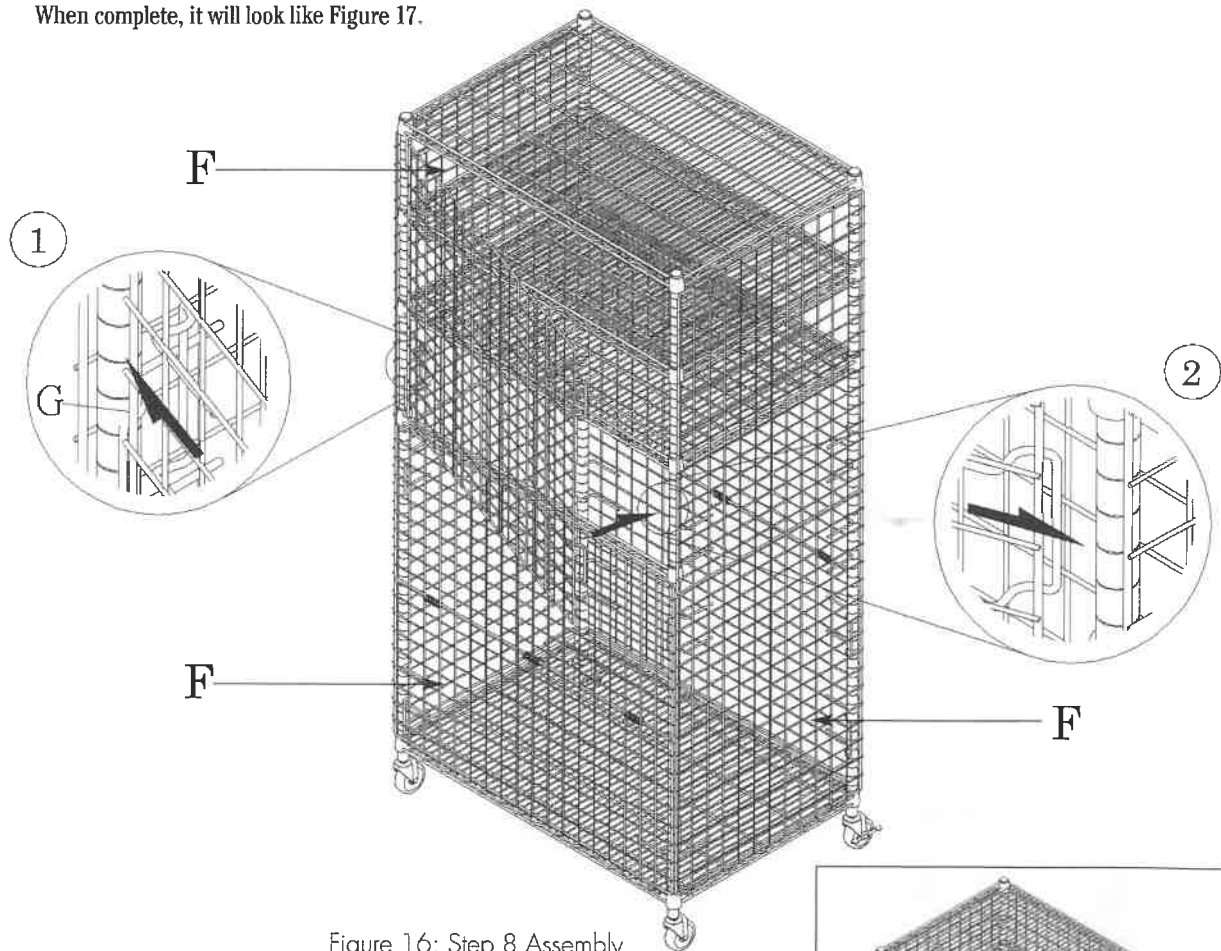

Step 9:

Attach clips (K) to both panels with doors (D) and (E) as shown in Figure 18 and insets.

Unlock the castors. Your Balls-N-More storage center is now assembled.

Please note the position of the warning plate. The plates are attached by securing the velcro straps to the cart.

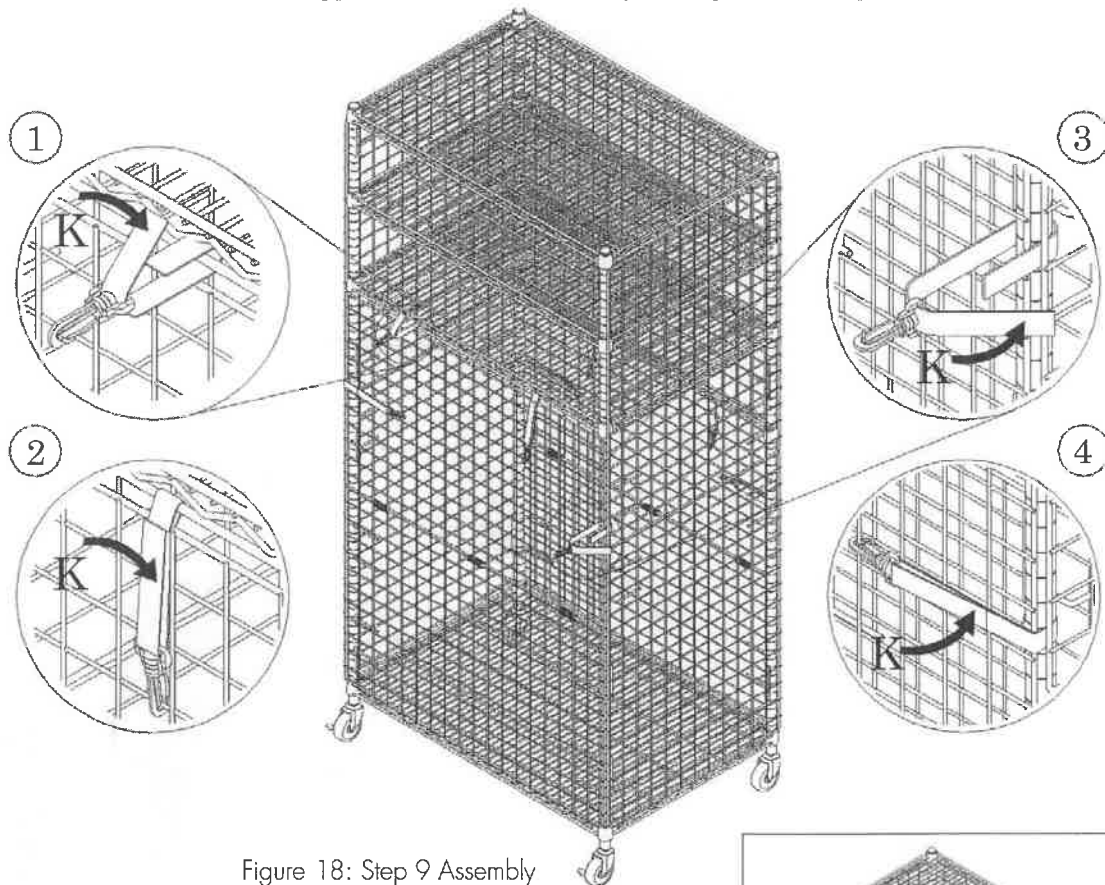


Figure 18: Step 9 Assembly

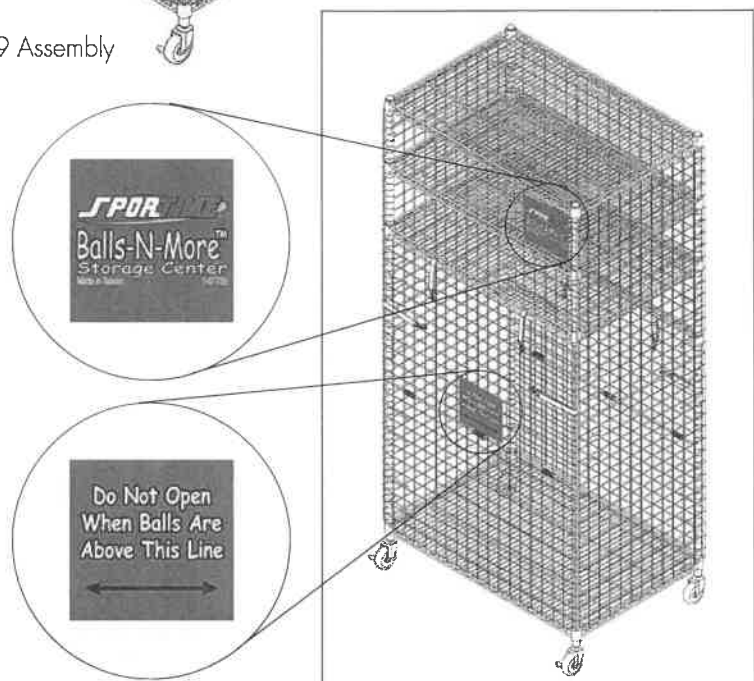


Figure 19: Step 9 Completed

To load/unload the cart, you can keep the hinge (K) half open as shown in Figure 20. It serves as a safety when locking the cart.

Warning: Do not open the hinged panel on the back if the balls are loaded higher than the hinges. This will cause the balls to fall out, and may cause injuries.

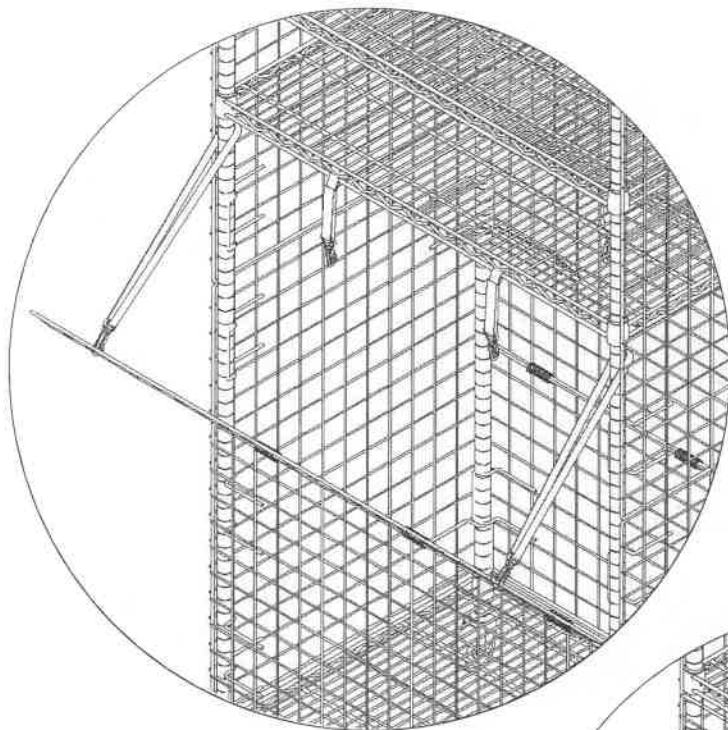


Figure 20: Door Partially Open

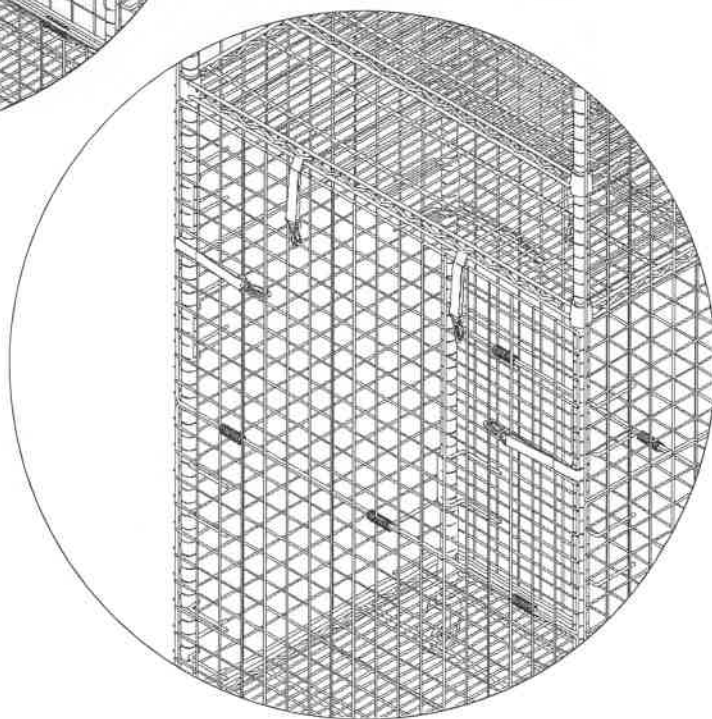


Figure 21: Door Closed and Secured

SPORTIME

©2005 Sportime, LLC • Norcross, GA 30010-2668 • USA • All rights reserved.
Customer Service 1-800-444-5700 or 1-770-449-5700
Or reach us via e-mail at: customer.service@sportime.com

1-YEAR GUARANTEE OF SATISFACTION

See more, fun activity guides for other great Sportime products at www.sportime.com.